 


MEP-U10

User's Guide

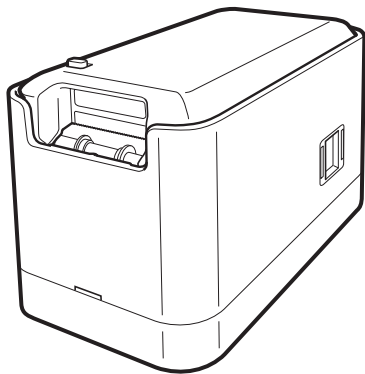

Be sure to keep all user documentation handy for future reference.



Manufacturer:
CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome, Shibuya-ku, Tokyo 151-8543, Japan

Responsible within the European Union:
CASIO EUROPE GmbH
Casio-Platz 1, 22848 Norderstedt, Germany



This mark applies in EU countries only.
Este símbolo es válido sólo en países de la UE.

“أن قابس مصدر الكهرباء الرئيسي للجهاز والذي يعمل كأداة للفصل من
المنبع الرئيسي يجب أن يبقى جاهز لإمكانية التشغيل”

“Where the main plug or an appliance coupler is used as the disconnect device,
the disconnect device shall remain readily operable”.

This manual covers the following information: precautions before printing with the MEP-U10 printer, installing the computer software that comes with the printer, and establishing a connection between the printer and a computer. For full details on software operations, see the manual on the CD-ROM that comes with the printer.

Before using the MEP-U10 printer, read the Safety Precautions in this manual. Keep this manual handy in a safe place for future reference when required.

- The contents of this manual are subject to change without notice.
- Everything has been done to ensure that the contents of this manual are clear and accurate. Please contact CASIO if you have any problem understanding manual contents or should you discover any errors.
- Any reproduction of this manual, either in part or its entirety, is forbidden. Note that any use of this manual for other than personal use without the permission of CASIO COMPUTER CO., LTD. violates copyright laws.
- CASIO COMPUTER CO., LTD. shall not be held in any way liable for any damages or losses suffered by you or any third party due to the use or malfunction of this product.
- Note the CASIO COMPUTER CO., LTD. shall not be held in any way liable for any losses or lost profits arising out of any loss of text data due to malfunction, repairs, or any other reason.

Important!

All rights to this manual and software shall revert to CASIO COMPUTER CO., LTD.

- Microsoft, Windows, and Windows Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Adobe, Reader, and Acrobat are trademarks of Adobe Systems Incorporated.
- Other company names and product names used herein are trademarks or registered trademarks of others. Note that TM and ® marks are not used within the text of this manual.

© 2012 CASIO COMPUTER CO., LTD. All rights reserved.

Except as required for proper use or for creating a backup copy, any reproduction of this manual and/or the program, either in part or in their entirety, is strictly forbidden without the express written permission of CASIO COMPUTER CO., LTD.

Safety Precautions

Thank you for purchasing this product. Before using it, be sure to read the Safety Precautions contained in this User's Guide. Keep this manual handy in a safe place for future reference when required.

Warning



This symbol indicates information that, if ignored or applied incorrectly, creates the possibility of death or serious personal injury.

Caution



This symbol indicates information that, if ignored or applied incorrectly, creates the risk of personal injury or material damage.

Examples of other markings



○ Indicates something you should not do. The symbol shown here indicates you should not try to take something apart.



● Indicates something you must do.

Warning

Smoke, abnormal odor, overheating, and other abnormalities



Do not continue to use the printer while it is emitting smoke or strange odor, or generating heat.

Continued use of the printer creates the risk of fire and electric shock. Immediately perform the following steps whenever any of the above symptoms are present.

1. Disconnect the USB cable.
2. Unplug the AC adaptor from the wall outlet.
3. Contact your original retailer.

AC Adaptor

Misuse of the optional AC adaptor creates the risk of fire and electric shock.

Make sure you observe the following.



- Use only the specified AC adaptor.
- Use only a power source that is within the input voltage range indicated by **INPUT** on the AC adaptor's rating plate.



- Never plug the power cord into a wall outlet that is shared by other devices, or into a shared extension cord.

AC Adaptor/USB Cable

Misuse of the AC adaptor/USB cable can cause it to become damaged, creating the risk of fire and electric shock.

Make sure you observe the following.



- Never place heavy objects on the AC adaptor/USB cable or subject it to direct heat.
- Do not use the AC adaptor/USB cable in areas where liquids might spill on them.
- Do not twist or pull on the AC adaptor/USB cable cord.
- Do not wrap the cord around the adaptor.



- Should the AC adaptor/USB cable or its plug ever become damaged, contact your original retailer.

AC Adaptor/USB Cable



- Never touch the AC adaptor/USB cable or plug while your hands are wet. Doing so creates the risk of electric shock.
- Do not use the AC adaptor/USB cable in areas where liquids might spill on them. Water creates the risk of fire and electric shock.
- Do not place a flower vase or any other liquid container on top of the AC adaptor/USB cable or power cord. Water creates the risk of fire and electric shock.
- Do not cover the AC adaptor/USB cable with a newspaper, tablecloth, curtain, futon, blanket, or other similar object. Doing so creates the risk of fire.

AC Adaptor



Before going out, be sure to unplug the power cord/AC adaptor from the power outlet and put in a place away from objects used by animals and pets. An animal or pet chewing on the power cord/AC adaptor can cause it short, leading to the risk of fire and electric shock.

 **Warning**

Dropping and Rough Treatment



Continued use of the printer after it is damaged by dropping or other rough treatment creates the risk of fire and electric shock. Immediately perform the following steps whenever any of the above symptoms are present.

1. Disconnect the USB cable.
2. Unplug the AC adaptor from the wall outlet.
3. Contact your original retailer.

Disassembly and Modification



Never try to take the printer apart or modify it in any way. Doing so creates the risk of electric shock, burn injury, and other personal injury.

Leave all internal inspection, maintenance, and repair up to your original retailer.

Liquids and Foreign Matter



Water, sports drinks, seawater, animal or pet urine, or foreign objects (pieces of metal, etc.) getting into the printer creates the risk of fire and electric shock. Immediately perform the following steps whenever any of the above symptoms are present.

1. Disconnect the USB cable.
2. Unplug the AC adaptor from the wall outlet.
3. Contact your original retailer.

Keep Away From Fire



Never throw the printer into fire to dispose of it. Doing so creates the risk of explosion, which can cause fire or personal injury.

Packaging Plastic Bag



Take care never to allow the plastic bag the printer comes in to be ingested or placed over anyone's head. Doing so creates the risk of suffocation.

Particular care is required in households where small children are present.

Labels Attachment Locations



Do not attach labels to containers used for heating in a microwave oven. The label material includes metal, so heating in a microwave oven creates the risk of fire and burn injury.

Also, the container with the label may become deformed.

Caution

AC Adaptor/USB Cable

Misuse of the AC adaptor/USB cable creates the risk of fire and electric shock. Make sure you observe the following.



- Never locate the AC adaptor/USB cable near a stove or other heating device.
- When unplugging from the wall outlet, grasp the AC adaptor/USB cable plug. Never pull on the AC adaptor/USB cable.



- Insert the AC adaptor plug into the wall outlet as far as it will go.
- Insert the USB cable plug into the connector as far as it will go.
- Unplug the AC adaptor from the power outlet and the USB cable from the connector before leaving the printer unattended for long periods, such as when leaving on a trip, etc.
- After you are finished using the printer, unplug the AC adaptor from the power outlet and the USB cable from the connector.
- At least once a year, unplug the power cord from the wall outlet and use a cloth or vacuum cleaner to clean any dust build up on the prongs of the power plug and in the area around the plug.
- Do not use detergent when cleaning the power cord (especially the plug) or the AC adaptor (especially the jack).
- Plug the AC adaptor into a power outlet that is near the printer and easily accessible so you can quickly unplug it in case of problems.
- Store the AC adaptor in a dry place.
- Use the power cord that comes with the printer to connect the AC adaptor.
- Do not use the power cord that comes with the printer with any other device. Failure to do so can lead to malfunction.

Connections



Plug only specified devices into the connectors of this printer. Non-specified devices create the risk of fire and electric shock.

Heavy Objects



Do not place heavy objects on the printer. Doing so can cause the printer to tip over or fall, creating the risk of personal injury.

Locations to be Avoided



Never leave the printer in any of the following types of locations. Doing so creates the risk of fire and electric shock.

- Areas subject to large amounts of humidity or dust
- Food preparation areas or other locations where oil smoke is present
- Near heaters, on a heated carpet, in areas exposed to direct sunlight, in a closed vehicle parked in the sun, or other areas subject to very high temperatures.

Unstable Locations



Never place the printer on an unstable surface, on a high shelf, etc. Doing so can cause the printer to fall, creating the risk of personal injury.

 **Caution**

Tape Loading and Tape Replacement Precautions



The cutter has sharp edges. Do not touch the cutter. Touching the cutter can cause finger cuts.

High-temperature Precautions



The printer head and the metal parts around it can become very hot. Do not touch them. Doing so creates the risk of burn injury.

Cutter Precautions



Do not insert your fingers into the cutter at the tape outlet. Doing so creates the risk of finger cuts and personal injury.

Use Precautions

To get the most out of your printer, be sure to observe the following precautions.

 
- Avoid using the printer in locations exposed to direct sunlight, locations with high humidity, locations where static electricity is easily generated, locations subjected to sudden extreme temperature changes, and locations where it is extremely cold or hot. The operating temperature range is 10°C to 35°C (50°F to 95°F).
- Take care to avoid allowing the printer to be subjected to strong impact or forces.
- Do not allow paper clips or pins to get inside of the printer.
- Do not pull on the tape with undue force or try to push it back into the printer.
- A dirty printer head will make printed text blurry. If this happens, refer to the user maintenance procedures in this manual (page 20) and clean the printer head and rubber roller.

Contents


Safety Precautions	2
Use Precautions	6
Checking Package Contents.....	8
Using the Printer's Documentation.....	8
About the Provided CD-ROM	9
Handling Precautions	9
Storage Precautions.....	9
Operating Environment Required by the Software.....	9
Installing the Software	10
Precautions when Installing and Uninstalling.....	10
CD-ROM Contents	10
Read This Before Installing the Software!	10
Viewing User Documentation on the CD-ROM	12
Removing the Software from Your Computer	12
General Guide	13
Loading and Removing Tape	13
Connecting the Printer to Your Computer	17
Printing a Label.....	19
User Maintenance	20
Troubleshooting.....	21
Specifications	23
Optional Accessory List.....	23

Checking Package Contents


Printer

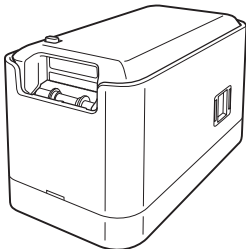

Application CD-ROM

 


 AC adaptor AD-A12200L
(power cord included)

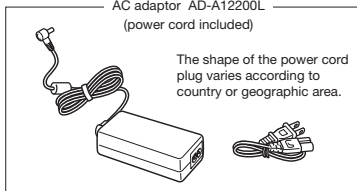

The shape of the power cord plug varies according to country or geographic area.

 USB cable

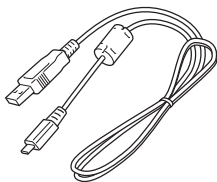

Tape (18mm/Approx. 0.7 in. wide)



This manual

- For information about optional accessories, see "Optional Accessory List" (page 23).

Using the Printer's Documentation

This printer comes with documentation in printed form and documentation provided on a CD-ROM.

■ Printed Manuals Provided with the Printer

- ① MEP-U10 Printer User's Guide (This Manual)

■ PDF File Documentation on the CD-ROM Provided with the Printer

- To view the MEP-PC10 PC Application User's Guide, you first need to copy the PDF file from the CD-ROM to your computer.
- ② MEP-PC10 PC Application User's Guide

About the Provided CD-ROM

Handling Precautions

- When handling the disk, make sure to avoid getting fingerprints or dirt on either side of it, and make sure not to scratch or damage the disk surface.
- If the disk becomes dirty, clean it with a soft, dry cloth (like the one use for cleaning eyeglasses), wiping from the center of the disk in a motion that radiates outwards. Do not use a phonograph record cleaner or other cleaning agents to clean a disk.
- Do not write or draw on either surface of the disk with a pencil, ballpoint pen or other hard pointed writing implement, and do not affix stickers to the disk.
- Never use a disk that is cracked, warped, or repaired with glue or by any other means. Doing so is dangerous.

Storage Precautions

- Avoid storing in locations exposed to high temperature, high humidity, and direct sunlight when storing the disk.
- After using the disk, store it in the case it came in when you bought the printer.
- Avoid storing the disk in a soft case or bag that comes into direct contact with the label side of the disk.

Warning

Never try to use the CD-ROM in a device that is not intended for CD-ROM reading. Playing back the CD-ROM on a music CD drive will output sound at a volume that can damage your ears or the speakers of an audio system.

Operating Environment Required by the Software

- | | |
|-----------|--|
| OS | Microsoft Windows 8, Windows 7, Windows Vista, Windows XP |
| Computer | PC/AT compatible computer that satisfies the conditions below. <ul style="list-style-type: none">• Pre-installed with one of the above operating systems.• CPU recommended for the operating system being used.• USB port installed as standard. |
| Memory | At least 128 MB of memory recommended for the operating system being used. |
| Hard Disk | At least 120 MB of free space. |
| CD drive | For installation |
- Any other system requirements recommended by the operating system being used.
 - Certain equipment configurations may not support proper operation.
 - This software will not run on Windows XP 64-bit versions.
 - Operation is not guaranteed on an operating system that has been upgraded or modified in any way from the pre-installed state.

Installing the Software

Installation of the software that come with the printer is explained in this manual based on a computer running the English version of Windows XP, with English selected as the display language. Screens produced by other operating systems or when another display language is selected may be different from the screen shots shown here.

For information about basic Windows operations, refer to the user documentation that came with your computer or your computer's help feature.

Precautions when Installing and Uninstalling

- If you have a previous version of the software installed on your computer, use **Add or Remove Programs** on the Windows Control Panels to uninstall it before installing this software.
- Note that you will need to log in to your system with an administrator account or an account with administrator privileges in order to install or uninstall software.

CD-ROM Contents

- MEP-PC10 PC application software
- MEP-PC10 PC Application User's Guide (PDF file)

Read This Before Installing the Software!

 
Important!

- Do not connect the printer to your computer until you install the software on your computer. The software may not operate correctly if you install it after connecting the printer.
- Trying to install the software while virus checker software is running on your computer can cause errors and/or warning messages to appear on your computer during installation. If this happens, perform the following steps.
 1. Exit the installer and uninstall the software that was installed up to this point.
 2. Exit the virus checker software and all other software currently running on your computer.
 3. Restart the installer.
 4. After installing the software, restart the programs you exited in step 2, above.

In this manual, drive D: is assumed as the CD drive.

■ To install the software


1. Before starting installation, exit all other programs currently running on your computer.
 - Failure to do so can result in improper installation.
2. Place the printer's CD-ROM into your computer's CD drive.
This should cause the screen shown nearby to appear automatically.

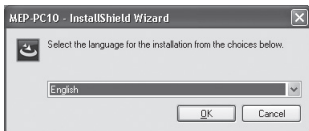


- The screen may not appear automatically on some computers. If that happens on your computer, go to your Windows **Start** menu, select **Run...**, input **D:\setup.exe** (don't forget to use the correct drive name in place of D:) into the text box on the screen that appears, and then click **OK**.
 - If your computer is running Windows 8, Windows 7, or Windows Vista, an AutoPlay menu will start up at this time. Select **Run setup.exe** under "**Install or run program from your media**" or "**Install or run program**". When the user account control dialog box appears, click **Yes** or **Continue**.
3. Select the installation language and then click **OK**.

This will start installation. Follow the instructions on your screen.

 - A message will appear on your screen to let you know when installation is complete.
- If your computer is running Windows 8, Windows 7, or Windows Vista, the message shown below will appear during installation. Click **Install** to proceed with the installation.

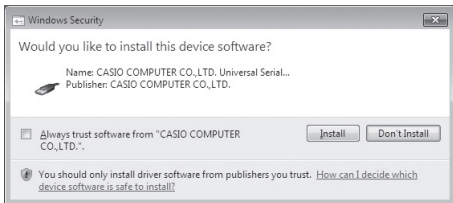

 - If your computer is running Windows XP, the message shown below may appear during installation. Click **Continue Anyway** to proceed with the installation.

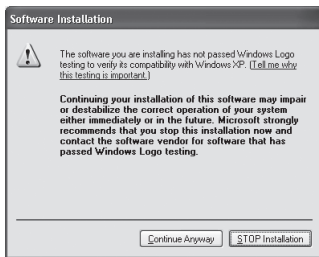

Viewing User Documentation on the CD-ROM

Your computer must have Adobe Reader or Acrobat Reader 5.0 or higher installed in order to view the software user documentation in the PDF files on the CD-ROM.

If you need to install one of these applications, visit the Adobe Systems Incorporated support site at <http://get.adobe.com/reader/> and follow the instructions there.

■ To view user documentation PDF files

1. Make sure that Adobe Reader or Acrobat Reader 5.0 or higher is installed on your computer (see the preceding section above).
2. On the Windows **Start** menu, select **Programs** and then **CASIO**. Next, align the mouse pointer with **MANUAL**, and then click the name of the PDF file you want to view.

 
Removing the Software from Your Computer

You can use the procedure below to remove the software from your computer.

■ To remove the software from your computer

1. On the Windows **Start** menu, click **Control Panel**.
2. Click the **Add or Remove Programs** icon.
This will display the **Add or Remove Programs** dialog box, which shows a list of software installed on your computer.
3. In the **Currently installed programs** list, click "MEP-PC10".
4. Click **Change or Remove Programs** or **Remove**.
 - On the delete confirmation screen that appears, click **OK**.
5. Click **Finish**.
This removes the software from your computer.

General Guide

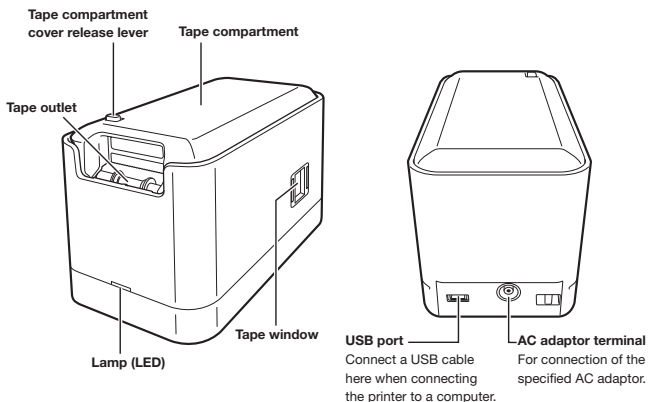


Loading and Removing Tape

Tape must be loaded in the printer in order to print labels.
Use the tape that comes with the printer or commercially available tape.

■ To load tape

 1. Slide the tape compartment cover release lever in the direction of arrow "a" and open the tape compartment cover. At this time, take care to avoid catching your fingers on the cutter.

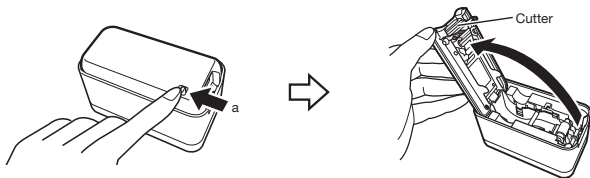


Important!

Do not try to force the tape compartment cover past its normal range of movement. Excessive force creates the risk of printer malfunction and damage.

2. Check the condition of the tape.

 - Make sure the tip of the tape is not bent. If it is, use scissors to cut off the bent part.



Tape

Pull out approximately 11 cm (4.3 in), measured from the center of the roll to the tip of the tape.

 
3. Place the tape into the printer.

Run the tape over the rubber roller (see figure below). Make sure the tape is seated securely onto the bearing.


- When loading tape, take care not to touch the cutter. Touching the cutter can cause finger cuts.
- The printer head becomes hot during printing. Do not touch the printer head when loading tape.

Important!


- Never try to push tape back in.
- Do not pull on the tape with excessive force. Doing so will lead to malfunction of the printer.
- Note that normal printing may not be possible at the leading edge of a new roll of tape.
- Incorrectly loading the tape can cause malfunction of the printer.

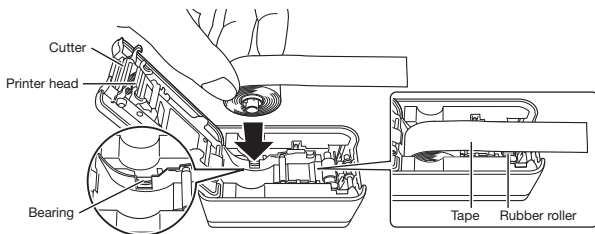

 - For 18 mm (approx. 0.7 in.) wide tape, pass the tape between the tape guides as shown in the nearby figure.

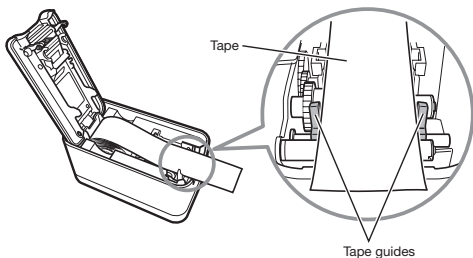


 - For 12 mm (approx. 0.5 in.) and 9 mm (approx. 0.4 in.) wide tape, pass the tape inside the tape guides as shown in the nearby figure.

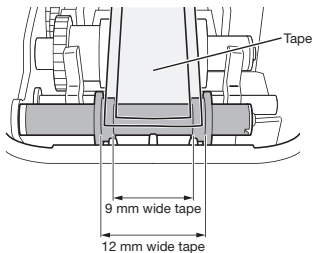

4. Close the tape compartment cover.

 - Press down on the cover until it clicks securely into place.
- Do not pull on the tape or try to push it back after loading it in the printer.

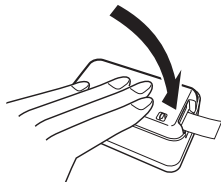


Tape Precautions

- Leaving the tape in the printer for long periods can cause unwanted marks on the tape, deterioration of adhesion, and even make proper printing impossible. Be sure to remove the tape and properly store it if you do not plan to print on it for a long time.
- This tape uses thermal paper. Use in the following types of locations can cause discoloration of the tape, and so should be avoided.
 - Near a window, outdoors, or in any other locations exposed to direct sunlight
 - Locations where tape is exposed to high temperatures, rain, or splashing water
- Do not scrape the printing surface of the tape with your finger nail, metal objects, etc.
- This tape uses a re-adherable type adhesive. Depending on the surface or object to which it is affixed, the tape may detach from the surface or leave glue residue when removed.
- Note that long term display of this tape can result in discoloration.
- When not using tape, store it in a plastic bag or its original box.
- Do not leave tape in a motor vehicle parked in sunlight.
- Avoid locations exposed to high temperature, high humidity, and direct sunlight when storing tape.
- The tape is subject to discoloration so use it as soon as possible after unpacking it.

■ To remove tape from the printer

 1. Open the tape compartment cover.
2. Grasp the tape with your fingers and lift straight up.
 - When removing tape, take care not to touch the cutter. Touching the cutter can cause finger cuts.
 - The printer head becomes hot during printing. Do not touch the printer head when removing tape.

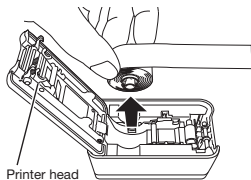

Connecting the Printer to Your Computer

Important!

 
Be sure to install the printer software on your computer before connecting the printer to it.

■ To connect the printer to your computer


1. After starting up Windows, connect the USB cable that comes with the printer to your computer's USB port.

Important!

Be sure to connect directly to a USB port on your computer. The printer may not operate correctly if it is connected indirectly to another USB port. Even if you connect directly to one of your computer's USB ports, your computer may not be able to recognize the printer due to some sort of incompatibility. If this happens, try connecting to a different USB port on your computer.

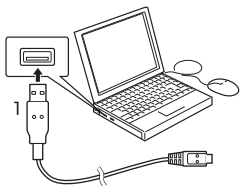

 2. Plug the AC adaptor plug into the printer's AC adaptor terminal.
3. Connect the power cord to the AC adaptor.
4. Plug the power cord into a household power outlet.

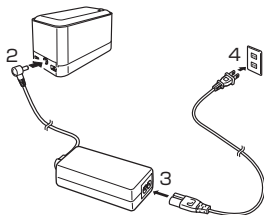


Important!

Use only the AC adaptor specified for this printer.

5. Connect the USB cable to the printer's USB port.

Important!

 If this is the first time you are connecting to the printer, you will need to remove the sticker from the printer's USB port.

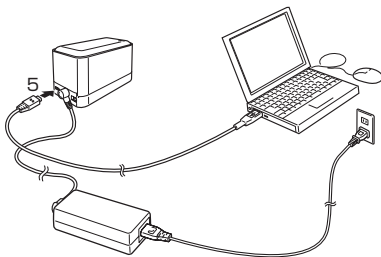


- This will display a wizard on your computer screen for installing the USB driver. The USB driver is required to make it possible for the printer to communicate with your computer. Follow the instructions that appear on your computer screen to install the USB driver.

- If your computer is running Windows XP Service Pack3 (SP3), the message shown nearby will appear during installation. Select **“No, not this time”** and then click **Next >** to proceed with the installation.



 - If your computer is running Windows XP, the warning message shown nearby will appear during installation. Click **Continue Anyway** to proceed with the installation.

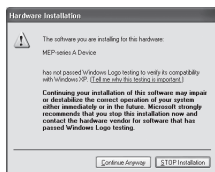

■ To disconnect the printer from your computer

- Disconnect the USB cable from the computer's USB port and the printer's USB port.
- Unplug the AC adaptor plug from the wall outlet, and disconnect the AC adaptor from the printer.

Important!

 
- Never disconnect the AC adaptor or USB cable while printing is in progress. Doing so can cause printer malfunction.
- Do not touch the AC adaptor plug or USB cable while data communication is in progress. Static electricity from your fingers and other problems can cause communication to be cut off.

Printing a Label

For information about the procedure required to print on tape, see the MEP-PC10 PC Application User's Guide.

■ To cut the tape

Holding the tape between your fingers as shown in the illustration, pull it up against the printer's tape cutter to cut it.

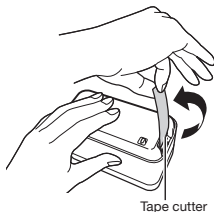

Important!

Check to make sure that printing is completely stopped before cutting the tape. Cutting the tape while printing is in progress can cause tape jams and damage the printer.

■ To affix a label to a surface

1. Use scissors or some other implement to trim the label to the required size, if necessary.
2. Affix the label to the desired surface.
 - Affixing a label to a surface may cause adhesive to remain on the surface when the label is removed.

Important!

Do not affix labels to the types of surfaces listed below.

Human or animal skin/walls, utility poles, and other surfaces located on other people's property/containers used for heating in a microwave oven

Unsuitable Surfaces (Label may not stick.)

- Rough surfaces
- Surfaces that are wet, oily, dusty, or covered with other matter
- Special plastic materials (silicon, polypropylene, etc.)

User Maintenance

Printed label quality will suffer if the printer head and/or rubber roller become dirty. A dirty tape cutter will result in poor cutting performance. Periodically perform the user maintenance steps below to clean the printer head, rubber roller, and tape cutter.

Important!

Use a cotton swab or some other similar soft object to clean the printer head, rubber roller, and tape cutter. Use of an ultra thin swab is recommended.

■ To clean printer components

1. Open the tape compartment cover.
 - If there is tape loaded in the printer, remove it.

 
Important!

The printer head is hot during and immediately after printing. Be sure to allow enough time for it to cool before removing the tape.

2. Moisten the swab with alcohol and then use it to wipe the printer head, rubber roller, and tape cutter surfaces. At this time, do not directly touch the tape cutter. Touching the cutter can cause finger cuts.

Take particular care when wiping the contact areas of the roller and printer head.

- You can also use a commercially available cassette tape recorder head cleaning kit for cleaning.

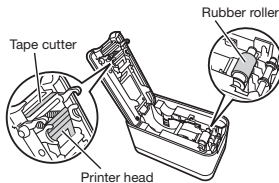

Cleaning the Exterior of the Printer

Moisten a soft cloth with water, completely wring out any excess, and then wipe the exterior of the printer. Do not use benzene, alcohol, thinner, or any other volatile agent, which can damage the printer.

Troubleshooting

Should you experience any problem with printer operation, take the actions described in the table below. If the steps described below do not solve the problem, contact your retailer or your nearest CASIO service center.

Symptom	Cause and Required Action
<ul style="list-style-type: none">● Printing is unclear.● Cannot produce good-quality printing.● Printing is dim.	<ul style="list-style-type: none">• Dirt, debris, or other foreign matter on printer head and/or rubber roller. → Clean printer head and rubber roller.
	<ul style="list-style-type: none">• Tape is not loaded correctly. → Correctly reload the tape.
	<ul style="list-style-type: none">• The print density setting is not correct. → Adjust the print density setting.
<ul style="list-style-type: none">● Nothing is printed.● Printer turns off during printing.	<ul style="list-style-type: none">• You are using a non-specified AC adaptor. → Use the specified AC adaptor.
	<ul style="list-style-type: none">• The printer head is overheated. → Wait for a while and try printing again later.
<ul style="list-style-type: none">● Connection with a computer cannot be established.	<ul style="list-style-type: none">• The USB cable is not connected correctly. → Check the connection and make sure the cable is connected properly. If this does not resolve the problem, try disconnecting and reconnecting the USB cable.• The USB driver is not installed on your computer. → Install the USB driver on your computer. If you still cannot establish a connection, try using a different USB port on your computer.• Use the USB cable that comes with the printer.

Symptom	Cause and Required Action
<ul style="list-style-type: none"> ● Tape does not come out of printer when printing. 	<ul style="list-style-type: none"> • The tape compartment cover is not closed securely. → Securely close the cover.
	<ul style="list-style-type: none"> • The printer is out of tape. → Replace the tape with new tape (available separately).
	<ul style="list-style-type: none"> • Tape is jammed. → Remove the tape from the printer, and then pull out the jammed tape with your fingers. Cut the pulled out tape with scissors, etc. After that, reload the tape. <p>Important! Do not do any of the following while printing is in progress.</p> <ul style="list-style-type: none"> • Block the tape outlet • Touch tape coming out of the printer • Open the tape compartment cover • Disconnect the AC adaptor
<ul style="list-style-type: none"> ● Tape will not cut. 	<ul style="list-style-type: none"> • You are not performing the tape cut procedure correctly. → See “To cut the tape” in “Printing a label”. • The tape cutter is dirty. → Clean the tape cutter referring to “To clean printer components”. • The tape cutter is dull. → Have the tape cutter replaced by your retailer or your local CASIO service center.
	<ul style="list-style-type: none"> • Tape is jammed in the tape outlet. → Remove the tape from the printer and remove the jammed tape.
<ul style="list-style-type: none"> ● Label does not adhere properly. 	<ul style="list-style-type: none"> • The location or object where you are affixing the label is not suitable. → Choose a surface that is smooth, free of water and/or oil, clean, etc.
<ul style="list-style-type: none"> ● Blank label margins are too large. 	<p>The printer is designed to always print labels with a blank margin.</p>

Specifications

Model: MEP-U10

Print

Print Resolution: 200 dpi

Print System: Thermal

Printing Speed: Approximately 10 mm (approx. 0.4 in.)/second

- The print speed depends on the printing environment, printing conditions, and other factors.

Print width: Approximately 12 mm (0.5 in.) maximum

a) 7 mm (approx. 0.3 in.) for 9 mm (approx. 0.4 in.) wide tape

b) 10 mm (approx. 0.4 in.) for 12 mm (approx. 0.5 in.) wide tape

c) 12 mm (approx. 0.5 in.) for 18 mm (approx. 0.7 in.) wide tape

Print length: Approximately 30 cm (12 in.) maximum

Power Supply, Other Items

Operating Power: AC adaptor (AD-A12200L)

Power Consumption: 9 W

Dimensions: 61 mm (W) × 118 mm (D) × 68 mm (H) (Approx. 2.4 × 4.6 × 2.7 in) (Including rubber feet.)

Weight: Approx. 235 g (0.5 lbs)

Operating Temperature: 10°C to 35°C (50°F to 95°F)

Optional Accessory List

● **Tape**

Tape width Tape color	18 mm	12 mm	9 mm
White	XA-18WE1	XA-12WE1	XA-9WE1
Yellow	XA-18YW1	XA-12YW1	XA-9YW1
Pink	XA-18PK1	XA-12PK1	XA-9PK1

- Some items may be sold out.
- Optional accessories are subject to change without notice.



ENGLISH

Disposal of Waste Electrical & Electronic Equipment of products for Household use
(Applicable in the European Union only)

The symbol (crossed out wheeled-bin) on your product indicates that the product shall not be mixed or disposed with your household waste, at their end of use.

This product shall be handed over to your local community waste collection point for the recycling of the product. For more information, please contact your Government Waste-Disposal department in your country. Inappropriate waste handling could possibly have a negative effect on the environment and human health due to potential hazardous substances. With your cooperation in the correct disposal of this product, you contribute to reuse, recycle and recover the product and our environment will be protected.

Disposal of Waste Electrical & Electronic Equipment of products for business use

(Applicable in the European Union only)
For further information regarding the disposal of products for business purposes, please contact your dealer or distributor in your country. This product shall not be mixed or disposed with commercial waste.

Italiano

Smaltimento di rifiuti costituiti da prodotti elettrici e elettronici per uso domestico

(applicabile soltanto nell'Unione Europea)
Il simbolo (un bidone con ruote sbarrato da una croce) sul prodotto indica che il prodotto non deve essere mischiato o smaltito con i rifiuti domestici, alla fine della sua durata.

Questo prodotto deve essere consegnato al punto di raccolta rifiuti della propria comunità locale per il suo riciclaggio.

Per ulteriori informazioni, rivolgersi all'organo statale preposto allo smaltimento dei rifiuti nel proprio paese. Uno smaltimento dei rifiuti inappropriato può avere effetti negativi sull'ambiente e sulla salute umana a causa di sostanze potenzialmente pericolose. Collaborando allo smaltimento corretto di questo prodotto, si contribuisce al riutilizzo, al riciclaggio e al recupero del prodotto, e alla protezione del nostro ambiente.

Smaltimento di rifiuti costituiti da prodotti elettrici e elettronici per uso commerciale

(applicabile soltanto nell'Unione Europea)
Per ulteriori informazioni riguardanti lo smaltimento di prodotti per uso commerciale, rivolgersi al proprio rivenditore o distributore nel proprio paese. Questo prodotto non deve essere mescolato o smaltito con i rifiuti commerciali.

Deutsch

Entsorgung von elektrischen & elektronischen Produkten für den Haushaltsgebrauch
(anzuwenden nur in den Ländern der Europäischen Union)

Dieses Symbol (ausgekreuzte Mülltonne) auf dem Produkt bezeichnet, dass Altgeräte usw. nicht wie normaler Haushaltsabfall in den Müll gegeben werden dürfen, sondern zum Recycling an einer hierfür vorgesehenen Annahmestelle abzugeben ist.

Für nähere Informationen wenden Sie sich bitte an die für Müllentsorgung zuständigen örtlichen Behörden. Bei unsachgemäßer Entsorgung besteht das Risiko nachteiliger Auswirkungen auf Umwelt und Gesundheit durch potentiell gefährliche Substanzen. Durch Ihre Kooperation zur ordnungsgemäßen Entsorgung fördern Sie die Wiederverwendung, das Recycling und die Rückgewinnung von Stoffen und tragen zum Umweltschutz bei.

Entsorgung von elektrischen & elektronischen Produkten durch gewerbliche Benutzer
(anzuwenden nur in den Ländern der Europäischen Union)

Für nähere Informationen zur Entsorgung durch gewerbliche Benutzer wenden Sie sich bitte an Ihren Händler oder den zuständigen Vertrieb. Das Produkt darf nicht in den normalen Gewerbemüll gegeben werden.

Español

Disposición sobre Residuos de aparatos eléctricos y electrónicos para los productos de uso doméstico
(Aplicable sólo a la Unión Europea)

Los productos identificados con este símbolo (papelera tachada) no deben eliminarse como residuos domésticos una vez finalizada su vida útil.

Este producto debe entregarse a un punto de recogida de la comunidad local para su recuperación y reciclado.

Para mayor información, póngase en contacto con el Departamento de Disposición de Desechos de su Ayuntamiento.

El manejo inadecuado de los residuos supone riesgos para la salud humana o el medio ambiente. Con la reutilización, el reciclado de los materiales u otras formas de valorización de tales productos usted contribuye de manera importante a la protección de nuestro medio ambiente.

Disposición de residuos de aparatos eléctricos y electrónicos para los productos de uso profesional.
(Aplicable sólo a la Unión Europea)

Para más información sobre la disposición de productos con fines profesionales, sírvase ponerse en contacto con el vendedor o distribuidor oficial de su país. Este producto no debe mezclarse ni desecharse junto con otros residuos.

Français

Traitement des appareils électriques et électroniques en fin de vie par les particuliers
(Applicable dans les pays de l'Union Européenne seulement)

Ce symbole (poubelle interdite) apposé sur le produit indique qu'en fin de vie ce produit ne doit pas être traité avec les déchets ménagers.

Il doit être remis à un point de collecte approprié pour le recyclage des appareils électriques et électroniques.

Pour de plus amples informations, veuillez contacter le service de collecte des déchets ménagers local. Un traitement inadapté des déchets contenant des substances potentiellement dangereuses peut avoir des effets néfastes sur l'environnement et la santé humaine.

Traitement des appareils électriques et électroniques en fin de vie par les entreprises
(Applicable dans les pays de l'Union Européenne seulement)

Pour de plus amples informations sur la collecte des déchets des professionnels, veuillez contacter votre revendeur ou distributeur local. Ce produit ne doit pas être traité avec les déchets d'entreprises.

Nederlands

Afvalverwijdering van Elektrische & Elektronische Apparatuur voor Huishoudelijk Gebruik
(Alleen van toepassing in de Europese Unie)

Het symbool (doorgekruisde afvalbak op wielen) op het product geeft aan dat het product aan het einde van haar levensduur niet samen met of in de vorm van huishoudafval mag worden weggegooid.

Het product moet naar een verzamelplaats (milieudepot) worden gebracht waar dergelijke producten worden gerecycled.

Neem voor meer informatie contact op met de relevante overheidsafdeling voor afval/vuilnis die in uw land bestaat.

Het kan nadelige gevolgen hebben op voor mens en milieu als afval op een verkeerde manier wordt behandeld waardoor potentieel schadelijke stoffen vrij komen. Door uw medewerking te verlenen en dit product op de juiste wijze wegwerpt, kunt u een bijdrage leveren aan het herstellen, hergebruiken en recylen van dit product om zo ons milieu te beschermen.

Afvalverwijdering van Elektrische & Elektronische Apparatuur voor Zakelijk Gebruik
(Alleen van toepassing in de Europese Unie)

Voor nadere informatie aangaande het wegwerpen van producten voor zakelijke doeleinden, wordt u verzocht contact op te nemen met uw dealer of de distributeur in uw land. Dit product mag niet samen met of in de vorm van commercieel afval worden weggegooid.

Polski

Usuwanie odpadów sprzętu elektrycznego & elektronicznego produktów pochodzących z gospodarstwa domowych

(Stosowane jedynie w Unii Europejskiej)

Symbol (przekreślony kosz) na Twoim produkcie oznacza, że produkt nie powinien być mieszany lub usuwany z Twoimi odpadami pochodzącymi z gospodarstwa domowego, po jego zużyciu.

Produkt ten powinien zostać dostarczony do lokalnego komunalnego punktu zbiórki odpadów, w celu recyklingu produktu.

W celu uzyskania większej ilości informacji, prosimy o skontaktowanie się z krajowym Wydziałem Zarządzania Gospodarką Odpadami w Twoim kraju.

Niewłaściwe manipulowanie odpadami może negatywnie oddziaływać na środowisko i zdrowie ludzi, wskutek potencjalnych substancji niebezpiecznych. Współpracując przy prawidłowym usunięciu tego produktu, przyczyniasz się do ponownego użycia, recyklingu i odzysku produktu i w ten sposób nasze środowisko będzie chronione.

Usuwanie odpadów sprzętu elektrycznego & elektronicznego produktów do użytku przedsiębiorstwa (Stosowane jedynie w Unii Europejskiej)

W celu uzyskania dalszych informacji odnośnie usuwania produktów używanych do celów przedsiębiorstwa, należy skontaktować się z Twoim sprzedawcą lub dystrybutorem w Twoim kraju. Produkt ten nie powinien być mieszany i usuwany z odpadami komunalnymi.

Danski

Bortskaffelse af udtjent elektrisk og elektronisk udstyr i produkter til hjemmbrug

(Gælder kun i EU)

Symbol (en overstreget affaldsspand med hjul) på produktet angiver, at produktet ikke må blandes med eller bortskaffes sammen med almindeligt husholdningsaffald, når det er udtjent.

Produktet skal afleveres til det lokale affaldsindleveringssted til genbrug.

Kontakt venligst afdelingen for bortskaffelse af affald i din kommune angående yderligere information. Uansigtsmæssig bortskaffelse af affald kan have en negativ virkning på miljøet og folks helbred, da det kan indeholde potentielle, farlige substanser. Med din medvirken i henseende til forskriftsmæssig bortskaffelse af dette produkt, kan du bidrage til at genbruge, recikulere og genindvinde produkterne og samtidigt medvirke til, at vores miljø vil blive beskyttet.

Bortskaffelse af udtjent elektrisk og elektronisk udstyr i produkter til forretningsbrug

(Gælder kun i EU)

Kontakt venligst din forhandler eller distributør der, hvor du bor, angående yderligere information om bortskaffelse af produkter til forretningsbrug. Dette produkt må ikke blandes med eller bortskaffes sammen med kommercielt affald.

Magyar

Háztartásban használt elektromos és elektronikus készülékek hulladékként való eltávolítása

(Csak az Európai Unióban alkalmazható)

A készüléken lévő szimbólum (keresztben áthúzott kuka) azt jelzi, hogy a terméket használat után ne keverje, illetve ne helyezze el háztartási hulladékkal.

A terméket újbóli hasznosításra le kell adnia a kijelölt hulladékgyűjtő helyen. További információért kérjük, forduljon az országában lévő illetékes állami hulladékelhelyezési szervezethez.

Nem megfelelő hulladékekzelésnek potenciálisan veszélyes anyagok miatt negatív hatása lehet a környezetre és az emberi egészségre. A termék helyes elhelyezésében való közreműködéssel Ön hozzájárul annak újrafelhasználásához, újrafeldolgozásához és visszanyeréséhez, és védi a környezetünket.

A gazdaságban használt elektromos és elektronikus készülékek hulladékként való eltávolítása

(Csak az Európai Unióban alkalmazható)

Az üzleti célú termékek ártalmatlanításával kapcsolatos további információért kérjük, forduljon az országában lévő kereskedőhöz vagy forgalmazóhoz. A terméket ne keverje, illetve ne helyezze el háztartási hulladékkal.

Česky

Nakládání s nepotřebnými domácími elektrickými a elektronickými zařízeními

(Pouze pro Evropskou unii)

Symbol (přeskrtnutá popelnice na kolečkách) na Vašem výrobku označuje, že výrobek se po ukončení jeho používání nesmí míchat a vyhazovat společně s běžným odpadem z domácnosti.

Tento výrobek je třeba odložit na určené sběrné místo ve vaší oblasti pro provedení recyklace tohoto výrobku.

Pro další informace se obraťte na místní orgány státní správy zabezpečující sběr a likvidaci odpadů.

Nesprávné nakládání s odpady by mohlo mít za následek negativní vliv na životní prostředí a lidské zdraví z důvodu možného vzniku škodlivých látek. Pomocí vaší spolupráce při správném způsobu znehodnocení tohoto výrobku přispějete ke znovu využití, recyklaci a obnově výrobku přičemž naše životní prostředí bude ochráněno.

Nakládání s nepotřebnými elektrickými a elektronickými zařízeními pro obchodní účely

(Pouze pro Evropskou unii)

Pro další informace o nakládání s odpady v podobě výrobků pro obchodní účely se obraťte na vašeho prodejce nebo distributora ve vaší zemi. Tento výrobek se nesmí míchat a vyhazovat společně s běžným obchodním odpadem.

Svenska

Bortskaffning av förbrukade elektriska & elektroniska produkter för hushållsbruk

(Gäller enbart i den Europeiska Unionen)

Denna symbol (en överskarsad sopstoppna) på produkten innebär att produkten ej ska blandas eller slängas med ditt hushållsaffall när den är förbrukad.

Produkten ska lämnas för återvinning till en lokal insamlingsplats för denna slags produkter.

Kontakta kommunkontoret för närmare detaljer om var du finner sådana insamlingsplatser.

Olämplig avfallshantering kan få negativa effekter på miljön och på människlig hälsa då en produkt kan innehålla farliga ämnen. Vi ber om ditt samarbete i bortskaffningen av denna produkt för att bidra till återvinning, återanvändning och en hälsosammare miljö.

Bortskaffning av förbrukade elektriska & elektroniska produkter för affärsbruk

(Gäller enbart i den Europeiska Unionen)

Kontakta din handlare eller distributör för närmare detaljer om bortskaffning av produkter som använts i affärsyfte. Denna produkt får inte blandas eller slängas med annat affärsavfall.

Português

Eliminação de Equipamentos Eléctricos e Electrónicos para Uso Doméstico

(Aplicável somente na União Europeia)

O símbolo (caixote de lixo de rodas com uma linha cruzada) em seu produto indica que o produto, no fim da sua vida útil, não deve ser misturado ou eliminado com o lixo doméstico comum.

Este produto deverá ser entregue a uma estação de recolha de lixo da comunidade local para a reciclagem do produto.

Para mais informações, entre em contacto com o Departamento de Tratamento de Lixo do Governo do seu país.

O tratamento de lixo incorrecto poderia provocar um efeito negativo no meio ambiente e saúde humana devido a substâncias potencialmente perigosas. Com a sua cooperação para a eliminação correcta deste produto, contribuirá para a reutilização, reciclagem e recuperação do produto, e nosso meio ambiente será protegido.

Eliminação de Equipamentos Eléctricos e Electrónicos para Uso Comercial

(Aplicável somente na União Europeia)

Para mais informações sobre a eliminação de produtos para propósitos comerciais, entre em contacto o seu revendedor ou distribuidor em seu país. Este produto não deverá ser misturado ou eliminado com lixo comercial.

Suomi

Sähkö- ja elektroniikkatuotteiden hävitysohjeet kotitalouksia varten (Vain Euroopan Unionia varten)

Tuotteeseen merkitty symboli (ylitse rüksattu jätesäiliö) osoittaa, että tuotetta ei saa sekoittaa eikä hävittää talousjätteiden kanssa.

Tuote on luovutettava sopivaan tällaisten laitteiden kierrätyksestä huolehtivaan keräyspisteeseen.

Pyydä lisätietoja jätteasioista vastaavilta paikallisilta viranomaisilta.

Tämän tuotteen asianmukaisen hävittämisen varmistamisella autetaan estämään sen mahdolliset ympäristöön ja terveyteen kohdistuvat haittavaikutukset, joita voi aiheutua muussa tapauksessa tämän tuotteen epäasianmukaisesta käsittelystä.

Hävittämällä tuotteen asianmukaisesti autat varmistamaan, että tuote uudelleenkäytetään, kierrätetään ja kerätään ja ympäristöä suojellaan.

Sähkö- ja elektroniikkatuotteiden hävitysohjeet yrityskäyttäjille (Vain Euroopan Unionia varten)

Lisätietoja tuotteiden hävitysohjeista yrityskäyttäjille antavat jälleenmyyjät tai edustajat kussakin maassa. Tätä tuotetta ei saa sekoittaa eikä hävittää kaupallisten jätteiden kanssa.

Slovenščina

Odlaganje odpadkov električne in elektronske opreme izdelkov za gospodinjstvo

(Uporabno samo v Evropski Uniji)

Oznaka (prekrižan smetnjak na kolesih) na vašem izdelku označuje, da se tega izdelka po končani uporabi ne sme mešati ali odvreči z ostalimi gospodinjstvi odpadki.

Ta izdelek je potrebno oddati vaši lokalni deponiji z odpadki za predelavo takšnih izdelkov.

Za podrobnejše podatke se obrnite na državni urad za odstranjevanje odpadkov v vaši državi.

Zaradi nevarnih snovi ima lahko naparčno upravljanje z odpadki negativne posledice na okolje in zdravje ljudi. Z vašim sodelovanjem pri pravilnem odstranjevanju tega izdelka, pripomorete k ponovni uporabi, recikliranju in nadomestitvi izdelka. Naše okolje bo tako varovano.

Odlaganje odpadkov električne in elektronske opreme izdelkov za poslovno uporabo

(Uporabno samo v Evropski Uniji)

Za podrobnejše podatke od odstranjevanju izdelkov za poslovno uporabo, se obrnite na prodajalca ali dobavitelja v vaši državi. Tega izdelka se ne sme mešati ali odvreči z ostalimi komercialnimi odpadki.

Ελληνικά

Διάθεση Αποβλήτων Ηλεκτρικού & Ηλεκτρονικού Εξοπλισμού Οικιακής χρήσης

(Εφαρμόζεται μόνο στην Ευρωπαϊκή Ένωση)
Το σύμβολο (διαγραμμένος τροχήλατος κάδος απορριμμάτων) πάνω στο προϊόν σας υποδεικνύει ότι αυτό το προϊόν, με τη λήξη της χρήσης του, δεν πρέπει να αναμιχθεί ή να απορριφθεί μαζί με οικιακά απορρίμματα. Αυτό το προϊόν πρέπει να παραδοθεί στο σημείο συλλογής αποβλήτων της περιοχής σας για την ανακύκλυσή του.

Για περισσότερες πληροφορίες, παρακαλείσθε να συμβουλευτείτε με τη Δημόσια Υπηρεσία Διάθεσης Αποβλήτων της χώρας σας. Η μη ορθή διαχείριση των αποβλήτων μπορεί να έχει αρνητικές επιπτώσεις στο περιβάλλον και στην ανθρώπινη υγεία λόγω της ενδεχόμενης ύπαρξης επικινδύνων ουσιών. Με τη συνεργασία σας στη σωστή διάθεση αυτού του προϊόντος, συμβάλλετε στην επαναχρησιμοποίηση, ανακύκλωση και αξιοποίηση του προϊόντος και προστατεύετε το περιβάλλον.

Διάθεση Αποβλήτων Ηλεκτρικού & Ηλεκτρονικού Εξοπλισμού επαγγελματικής χρήσης

(Εφαρμόζεται μόνο στην Ευρωπαϊκή Ένωση)
Για περισσότερες πληροφορίες σχετικά με τη διάθεση των προϊόντων που προορίζονται για επαγγελματική χρήση, παρακαλείσθε να επικοινωνήσετε με τον έμπορο ή τον αντιπρόσωπο της χώρας σας. Αυτό το προϊόν δεν πρέπει να αναμιχθεί ή να απορριφθεί μαζί με απόβλητα εμπορικής προέλευσης.

Lietuvių

Elektros ir elektroninės įrangos, naudotos buitijje, šalinimas (galioja tik Europos Sąjungoje)

Simbolis (perbraukta šiukšlių dėžė su ratais), esantis ant jūsų įsigytos įrangos, reiškia, kad įranga, pasibaigus jos naudojimui, negali būti maišoma ar šalinama kartu su buitiniėmis atliekomis.

Tokia įranga turi būti perduota jūsų vietos bendruomenės atliekų surinkimo centrui, kad būtų panaudota kaip antrinė žaliava.

Daugiau informacijos galite gauti jūsų šalies vyriausybės atliekų tvarkymo departamente.

Netinkamas atliekų šalinimas gali neigiamai veikti aplinką ir žmonių sveikatą, nes atliekose gali būti pavojingų medžiagų. Teisingai šalinami šia įranga jūs prisidedate prie pakartotinio įrangos panaudojimo, perdirbimo ir regeneracijos ir taip apsaugote aplinką.

Elektros ir elektroninės įrangos, naudotos komercinėje veikloje, šalinimas

(galioja tik Europos Sąjungoje)

Daugiau informacijos apie komercinėje veikloje naudotos įrangos šalinimą galite gauti iš prekybininkų ar platintojų jūsų šalyje. Ši įranga negali būti maišoma ar išmetama kartu su komercinėmis atliekomis.

Slovenčina

Likvidácia elektrického a elektronického zariadenia výrobkov určených pre domáce použitie (platné len v Európskej únii)

Symbol (prečiarknutý odpadkový kôš) na výrobku znamená, že daný výrobok nie je možné po skončení používania zmiešať a vyhodiť spolu s bežným domácim odpadom.

Výrobok je nutné odovzdať do zberne odpadu vo vašej lokalite, kde dôjde k jeho recyklácii.

Presné informácie Vám poskytneme úrad štátnej správy zodpovedný za zber a likvidáciu odpadu.

Nesprávna likvidácia odpadu môže mať negatívny dopad na životné prostredie a ohroziť ľudské zdravie nebezpečnými látkami.

Naopak správnym postupom pri likvidácii odpadu umožníte jeho opätovné použitie, recykláciu a obnovenie výrobku, čím prispějete k ochrane životného prostredia.

Likvidácia elektrického a elektronického zariadenia výrobkov určených pre priemyselné použitie (platné len v Európskej únii)

Presné informácie ohľadom likvidácie odpadov výrobkov pre priemyselné použitie Vám poskytneme predajca alebo distribútor vo Vašej krajine. Výrobok by nemal byť zmiešaný a vyhodенý spolu s ostatným priemyselným odpadom.

Eesti

Kodus kasutatavate elektriliste ja elektronikaartavete kõrvaldamisest.

(Kehtiv vaid Euroopa Ühenduse liikmesriikides)

Sümbol (ristiga maha tõmmatud vagun) tootel osutab, et käesolevat toodet ei tohi peale selle kasutusõlmatuosit muutmist visata ära koos muu majapidamises tekkinva prügiaga.

Käesolev toode on ümbertöödeldav ning tuleb viia kohaliku prügikogumise- või ümbertöötluskeskusesse.

Täpsema informatsiooni saamiseks palume pöörduda selle riigisutuse poole Teie riigis, mis tegeleb prügimajanduse puutuvate regulatsioonidega.

Käesoleva toote vale käsitlemine selle kõrvaldamisel võib põhjustada võimalikult riskiannetest tulenevat negatiivset mõju nii keskkonnale kui ka Teie tervisele. Toote korrektne käsitlemine ka peale selle kasutusõlmatuosit muutmist ja Teie kaastöö käesoleva toote kõrvaldamisususe või ümbertöötlususe saamisel avab Teile lisavõimaluse kaitsta õhist looduskeskkonda.

Kasutusõlmatuosit muutuud elektriliste ja elektronikaartavete kõrvaldamisest firmades ja asutustes.

(Kehtiv vaid Euroopa Ühenduse liikmesriikides)

Täpsemate juhiste hankimiseks palume pöörduda Teie riigis asuva edasimüüja või vahendaja poole. Käesolevat toodet ei ole lubatud ära visata koos muu prügiaga.

Latviešu

Atbrīvošanās no Elektriskajiem Atkritumiem un Elektroniskām Mājsaimniecības Ierīcēm

(Direktīva ir spēkā tikai Eiropas Savienībā)

Simbols (pārsvītota atkritumu tvērtne), uz jūsu produkta, nozīmē, ka produktu nedrīkst izmest, pēc derīguma termiņa beigām, kopā ar parastajiem mājas atkritumiem.

Šis produkts tiks nodots vietējā kaitīgo atkritumu savākšanas punktā tā pārstrādāšanai.

Lai iegūtu plašāku informāciju, lūdzu, sazinieties ar jūsu Valsts atkritumu pārstrādes nodalu.

Nepareiza atbrīvošanas no šī produkta var atstāt negatīvu ietekmi uz apkārtni vidi un cilvēku veselību potenciālā kaitīgā sastāva dēļ. Ar jūsu sadarbību šis produkta pareizā pārstrādē, jūs palīdzat aizsargāt apkārtni vidi un atbalstāt produktu vairākkārtēju izmantošanu.

Atbrīvošanās no elektroniskajiem atkritumiem un elektroniska aprīkojuma, kas tiek izmantoti biznesa vajadzībām

(Direktīva ir spēkā tikai Eiropas Savienībā)

Lai iegūtu plašāku informāciju par biznesa klases produktu pārstrādi, griežieties pie vietējā izplatītāja vai pārdevēja jūsu valstī. Šo produktu nedrīkst izmest kopā ar tirdzniecības atkritumiem.

Malti

Rimi ta' Prodotti Elettriċi u Elettronici għal użu Domestiku

(Applikabbli biss fl-Unjoni Ewropea)

Is-simbolu (barmil tal-iskart bir-roti maqtagħ b'sinjal) fuq il-prodotti tiegħek jindika li il-prodott m'għandux jiġi imħallat jew mormi ma' skart domestiku meta jispiċċa l-użu tiegħu.

Dan il-prodott għandu jiġi ritornat lill-agenzija li tiehu hsieb il-ġbir tal-iskart domestiku fil-komunita tiegħek sabiex jiġi riċiklat.

Għal aktar informazzjoni inti mitlub tikkuntattja lid-dipartiment responsabbli mill-ġbir tal-iskart f'pajjiżek.

Minhabba xi kmieċ li jistgħu jkunu perikolużi għas-saħħa, jekk dan il-prodott ma jiġix mormi kif indikat, jista' jkun hemm effetti negattivi fuq l-ambjent u s-saħħa.

Meta inti tarmi dan il-prodott kif suppost, inti tkun qiegħed tikkontribwixxi għall-użu mill-ġdid tal-prodott, għar-riċiklaġġ, u sabiex issalva l-materjal li minnu hu magħmul il-prodott, u b'hekk l-ambjent tagħna jkun qiegħed jiġi protett.

Rimi ta' prodotti Elettriċi u Elettronici għal użu Kummerċjali

(Applikabbli biss fl-Unjoni Ewropea)

Tista' tikseb aktar informazzjoni dwar kif għandek tiddisponi minn dan it-tip ta' skart mingħand id-distributur lokali ta' dan il-prodott.

Meta jiġi mormi, dan il-prodott m'għandux jiġi mħallat ma' tipi ta' skart kummerċjali oħra.

Srpski

Odlaganje otpada iz električne i elektronske opreme i proizvoda za domaćinstvo

Simbol (precrтана kanta za otpatke sa točkicama) na vašem proizvodu označava da se proizvod po isteku svog radnog veka ne sme pomešati, nihi bacati zajedno sa otpadom iz domaćinstva.

Ovaj proizvod se mora predati na mestu za prikupljanje otpada za reciklažu u vašoj lokalnoj zajednici.

Za dodatne informacije molimo kontaktirajte nadležni organ za odlaganje otpada u vašoj zemlji.

Nepravilno rukovanje otpadom može negativno da utiče na životnu sredinu i zdravlje ljudi, zbog potencijalno opasnih supstanci.

Vašom saradnjom na pravilnom odlaganju ovog proizvoda, Vi doprinosite ponovnom korišćenju, recikliranju i sakupljanju proizvoda što će zaštititi vašu životnu sredinu.

Odlaganje otpada iz električne i elektronske opreme i proizvoda za profesionalnu upotrebu

Za dodatne informacije u vezi odlaganja proizvoda za profesionalnu upotrebu, molimo kontaktirajte vašeg prodavca ili distributera u vašoj zemlji. Ovaj proizvod ne sme da se meša, ni da se odlaze zajedno sa komercijalnim otpadom.

CASIO®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan



M150EU020

MO1209-A

Printed in China

© 2012 CASIO COMPUTER CO., LTD.