

Introduction

The Dymo Pocket Electronic Labelmaker enables you to create a wide variety of high quality self-adhesive labels of up to 100 characters. The Labelmaker uses 9mm ($\frac{3}{8}$ ") or 12mm ($\frac{1}{2}$ ") wide tape cassettes in a number of label colours.

Condensed, normal or extended text can be printed horizontally or vertically and is always centred on the label.

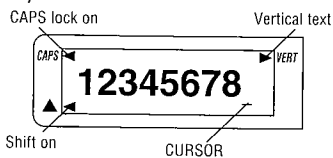
Power Supply

- Pull back catch **A** then lift and remove battery compartment cover **A** – see page 2.
- Insert six size AAA alkaline or re-chargeable nickel-cadmium batteries, observing the polarity markings **A**, and refit cover.
- Remove batteries if the Labelmaker is to be unused for some time.

Changing the cassette

- Slide catch **B** to the right to open cassette door **B** – see page 2.
- Hold as shown, then lift cassette **B** straight up and out.
- Ensure tape and ribbon **B** are taut across mouth of cassette and tape passes between guide posts before installing as shown. If necessary, turn spool **B** clockwise to tighten ribbon.
- Insert cassette and push **firmly C** until it **clicks** into place.
- Ensure tape and ribbon are positioned as shown between pinch roller **C** and print head **C**.

The Display



The display shows:

- Up to eight text characters, plus the cursor, at one time. Use **←** or **→** to move along the text.
- Three indicators – as shown above.
- The display will flash if you press an incorrect key in a function sequence.

Function keys

ON/OFF **⏻**

Switches the power on and off.

- Switches off automatically after two minutes if no keys are pressed. The last label created will be stored and displayed when next turned on.

Note: If the batteries are removed for more than a few seconds, all text and settings will be lost. When power is restored, the display will show a flashing cursor (no text) and the settings will be normal text with **▲**, **VERT** and **CAPS** off.

CAPITALS **CAPS**

- Press for all subsequent characters in UPPER CASE (CAPITALS), as confirmed by the **CAPS** indicator in the top left corner of the display.
- Press again to cancel and return to lower case.

SHIFT KEY **▲**

- Press and release **▲** before pressing an alphabet key to produce an UPPER CASE (CAPS) character, as confirmed by the **▲** indicator in the lower left corner of the display.
- For dual purpose keys, press **▲** first to produce the legend above the key.
- Pressing **▲** while **CAPS** is set will give lower case characters.

DELETE **DEL**

- Press to delete the character to the left of the cursor, or to cancel certain function key operations.

CLEAR TEXT **▲** + **CLEAR** / **DEL**


- Press to clear all the text, but leave the text size and style settings unchanged.

CURSOR KEYS **←** or **→**

 
- Press to move the cursor along the text, one character at a time.
- Press and hold to scan quickly through the text.
- When used in conjunction with certain function keys, use **←** or **→** to select options.
- To insert characters into the text, use **←** or **→** to position the cursor under the character to the right of the insertion point, then type in the characters required.

GB

PRINTING

- Press  to print the label.
- Press the cutter button **E** to release the label – see page 2.

SPACE KEY

- Press  to insert a space into the text.

SYMBOLS +


 
 

 

- Press to select a symbol character – see SYMBOLS table, page 2.

TEXT SIZE +

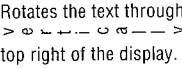
- Press to display the symbols for the three text print sizes:

- condensed
- normal
- extended

The cursor will be positioned over the current selection.


 
- Press  to cancel, or use  or  to move the cursor over the size symbol required, then press  +  to confirm the selection, or  to fix the new size and print the label.



VERTICAL TEXT +

- Rotates the text through 90° so that the label is printed , as confirmed by the **VERT** indicator in the top right of the display.
- Press again to cancel and return to horizontal text.


 
Symbols and special characters

International characters


To add a diacritical (accent) to create an international character, enter the character first, followed immediately by the diacritical, e.g. press  followed by  to get **é**.


 
 

To add a diacritical to an existing character, use  or  to place the cursor under the character to be changed, then press the appropriate diacritical key.


 
 


 
 
 
Symbols

Press  +  to show symbols and special characters, some of which are not available direct from the keyboard. The display will show: **a-q?**

Each letter selects a line of eight symbol characters, as shown in the table on page 2.

Press  to cancel or press the letter key required.

Use  or  to select a symbol. Press  again to place the symbol in the label, or press  to place it and print the label.

Print contrast — may be adjusted by pressing  +  followed by  to display five contrast symbols . Use  or  to select lighter or darker print. Press  +  again to confirm the setting. The contrast level will revert to the mid-setting when the Labelmaker is turned off and on again.

Cleaning

- Clean the cutter blade regularly: Remove the cassette, then use a ball pen or pencil to hold down interlock pin **D** – see page 2.
- Press and hold in cutter button **D** to expose blade **D**.
- Release interlock pin **D**, then use a cotton bud and alcohol to clean both sides of cutter blade **D**. Release cutter button **D**.
- Check and clean print head face **D** regularly using cotton bud and alcohol ONLY.

Troubleshooting


No display

- check machine is on
- replace discharged batteries.

No printing or poor text

- replace discharged batteries
- check tape cassette installed correctly
- replace the tape cassette.

No response to print key

- **!!!!!!** in the display indicates a printer jam. Press any key to return to normal display. Open the cassette compartment and free the jam.
-  flashing in the display indicates discharged batteries. Press any key to return to normal display. Replace batteries.

Accessori - Cartucce nastro

Larghezza:	9mm (3/8")	12mm (1/2")	12mm (1/2")
	7m	7m	3m
Nero/trasparente	40910	45010	43110
Blu/trasparente		45011	
Rosso/trasparente		45012	
Nero/bianco	40913	45013	43113
Blu/bianco	40914	45014	43114
Rosso/bianco	40915	45015	43115
Nero/blu	40916	45016	43116
Nero/rosso	40917	45017	43117
Nero/giallo	40918	45018	43118
Nero/verde	40919	45019	43119

I

Questo apparecchio è prodotto in conformità alle direttive CEE sulle apparecchiature a basso voltaggio ed è uniformato alle seguenti norme internazionali:
 Sicurezza - EN 60950, IEC 950, UL 1950
 EMC emissioni - EN 55022 Class B, CIS PR22 Class B, FCC pt15 Sub pt B Class B
 EMC immunità - EN50082-1, IEC801-2 & IEC801-3
 Pubblicato da DAW Publications Cambridge

Aksesoria - Kasety z taśmami :

szerokość :	9mm (3/8")	12mm (1/2")	12mm (1/2")
	7m	7m	3m
czarna/przezroczysta	40910	45010	43110
niebieska/przezroczysta		45011	
czerwona/przezroczysta		45012	
czarna/biała	40913	45013	43113
niebieska/biała	40914	45014	43114
czerwona/biała	40915	45015	43115
czarna/niebieska	40916	45016	43116
czarna/czerwona	40917	45017	43117
czarna/żółta	40918	45018	43118
czarna/zielona	40919	45019	43119

PL**Accessoires - Ruban cassette**

Largeur:	9mm (3/8")	12mm (1/2")	12mm (1/2")
	7m	7m	3m
Noir/Transparent	40910	45010	43110
Bleu/Transparent		45011	
Rouge/Transparent		45012	
Noir/Blanc	40913	45013	43113
Bleu/Blanc	40914	45014	43114
Rouge/Blanc	40915	45015	43115
Noir/Bleu	40916	45016	43116
Noir/Rouge	40917	45017	43117
Noir/Jaune	40918	45018	43118
Noir/Vert	40919	45019	43119

F**Accessories**

Tape cassettes	9mm (3/8")	12mm (1/2")	12mm (1/2")
	7m	7m	3m
Width:			
Length:			
Black/Clear	40910	45010	43110
Blue/Clear		45011	
Red/Clear		45012	
Black/White	40913	45013	43113
Blue/White	40914	45014	43114
Red/White	40915	45015	43115
Black/Blue	40916	45016	43116
Black/Red	40917	45017	43117
Black/Yellow	40918	45018	43118
Black/Green	40919	45019	43119

GB

This product is CE marked in accordance with the EMC directive and the low voltage directive and is designed to conform with the following international standards:

Safety - EN 60950, IEC 950, UL 1950
 EMC emissions - EN 55022 Class B, CIS PR22 Class B, FCC pt15 Sub pt B Class B
 EMC immunity - EN50082-1, IEC801-2 & IEC801-3

Written by DAW Publications, Cambridge
 © 1995 Esselte Dymo N.V. P.O. Box 85, Industriepark-Noord 30, 9100 Sint-Niklaas, Belgium

Accesorios

Cintas	9mm (3/8")	12mm (1/2")	12mm (1/2")
	7m	7m	3m
Anchura:			
Longitud:			
Negro/Transparente	40910	45010	43110
Azul/Transparente		45011	
Rojo/Transparente		45012	
Negro/Blanco	40913	45013	43113
Azul/Blanco	40914	45014	43114
Rojo/Blanco	40915	45015	43115
Negro/Azul	40916	45016	43116
Negro/Rojo	40917	45017	43117
Negro/Amarillo	40918	45018	43118
Negro/Verde	40919	45019	43119

E

Este producto está diseñado de acuerdo con las directivas de la CEE y las normas de bajo voltaje además de las siguientes normas internacionales:

Seguridad - EN 60950, IEC 950, UL 1950
 EMC emisiones - EN 55022 Clase B, CIS PR22 Clase B, FCC pt15 Sub pt B Clase B

EMC inmunidad - EN50082-1, IEC801-2 y IEC801-3
 Escrito por DAW Publications, Cambridge
 © 1.995 ESSELTE S.A., Via Augusta 20-26, 08006 BARCELONA - ESPAÑA